


Inspection & Take Down Checklist

Setup Inspection Checklist	
	Weather conditions are safe for operation with no winds over 10 mph.
	Air tube(s) are secured onto the blower free of twists or bends. Unused tube(s) are tied off to prevent release of air.
	All zippers are zipped closed and/or Velcro flaps are closed shut.
	Inflatable is anchored with stakes or sandbags.
	Tie down straps are strong with no breakage.
	Entrance/Exit is obstruction-free and will remain clear.
	Warning signs are clear and visible.
	Internal air pressure is sufficient to give a firm footing when jumping.
	No debris or sharp objects are present.
	Passageways are clear of obstruction.
	Inflatable is clear of any utility lines.
	Electrical cords no longer than 50 feet & are free from wear. They do not pose any trip hazards to patrons or guests.
	Exiting water will drain away the inflatable.
	Blower is working and plugged into a GFCI 110v outlet without potential breaker overload.

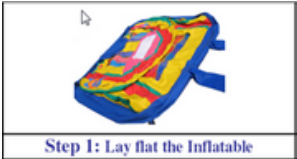

Step 1: Lay flat the Inflatable



Step 2: Fold in one-fourth



Step 3: Fold in one-fourth from the other side



Step 4: Fold one part over the other part



Step 5: Start roll from the front



Step 6: Roll all the way toward air tubes



Step 7: Fold in air tubes



Step: Tie tight with straps